

Disable E4 Push Button: Disconnect blue wire from connector.



Incidence: E4 lock was installed in a daycare center. Kids locked their teacher from outside by push the “Push Button” from inside.